



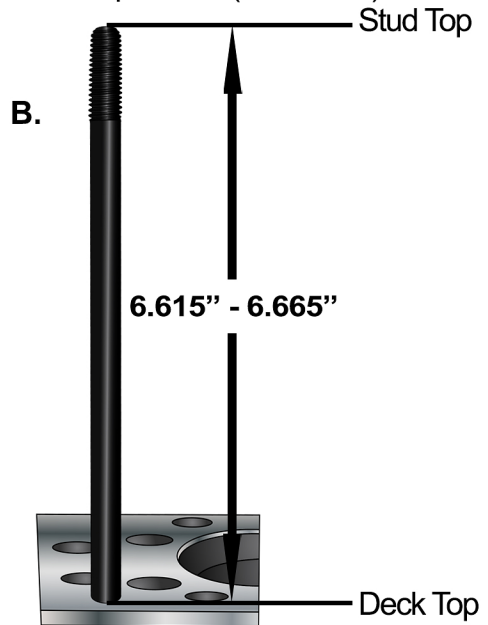

PAGE 2: INSTALLATION ON '89-'98 CUMMINS 5.9L 12V - PART #TTC899812VHS08

In order to bring our 12pt nut and washer combination down to the same installed height as the factory head bolt, modification of the rocker arm pedestal (illustration A) is needed. Also included in this kit are the secondary 8mm rocker arm pedestal (hold down) bolts which were previously unavailable.

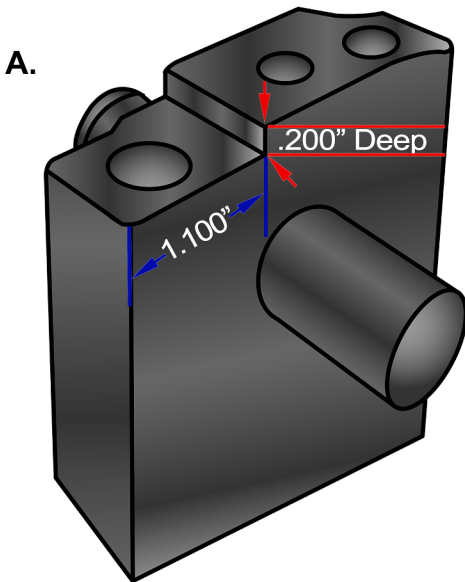

Following the manufacturers recommended torque sequence, tighten the nuts in three equal steps to the specifications listed in the diagram below.

